

ZERO PLATE™

ZERO PLATE

Patent and design applications pending.

- This is a dedicated base that allows you to adjust the zero point (centering) of a spirit level anywhere.
- The main body is electroless nickel-plated and heat-treated, ensuring long-lasting and reliable use.
- We offer two models, depending on the size of your spirit level (150mm or less and 200mm).

Product No	Size (mm)	Recommended load capacity Level size	Weight (kg)
502-150	150	~150mm	3.8
502-200	200	~ 200mm	4.4

 
Material: Iron (HRC50)

Storage: EVA case

Accessories: Hex wrench, spanner, Instruction manual, leveling jack, Hex socket head bolt M5 x 10, handle




Leveling jack

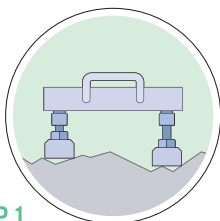

STEP 1

Set

 
Place the ZERO PLATE on top of the leveling jack.

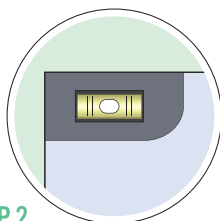

STEP 2

horizontal adjustment

 
While checking the built-in spirit level, operate the leveling jack to roughly adjust the surface to a horizontal position.

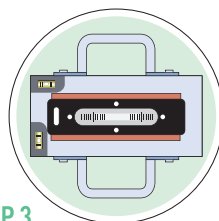

STEP 3

Fine adjustment

 Place a spirit level on top and adjust the leveling jack so that the bubble is in the center.

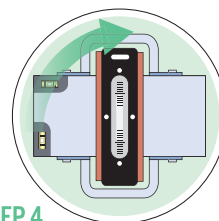

STEP 4

Zero point adjustment

Rotate the spirit level 180° and confirm that the bubble is not misaligned. The process is now complete.

You can adjust the zero point of the spirit level anywhere!

Even on uneven floors

Even if floor level x floor

Even on a floor without a surface plate

The leveling jack, with its steel ball-supported tip, will conform to any level on the floor.

The internal spirit level allows for rough leveling, saving time.

The main body is treated with electroless nickel coating, so it won't rust!