

Table of contents

Signal Words -----	1
Precautions for Use -----	2
Structure and Operating Principle -----	7
Movement of Clamp and Operating Principle -----	8
Actuator Replacement -----	9
Actuator Replacement Principle -----	9
Basic Specification -----	10
Procedure for Shaping Jaws -----	10
Dimensions of Soft Jaw -----	12
Jaw Reshaping Procedure -----	13
Procedure for Attaching the Actuator and Cylinder -----	15
Bolt Tightening Torque -----	16
Procedure for Replacing the Actuator -----	17
Operation System Diagram -----	18
Consumables and Parts -----	18
Troubleshooting -----	19
Warranty of VIDA CLAMP -----	20
Data Sheet for VIDA CLAMP -----	21