


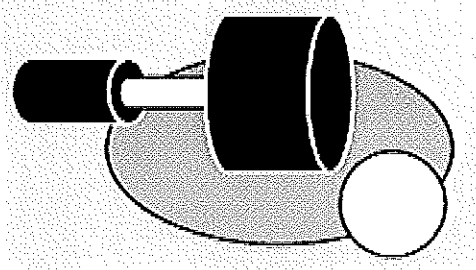


The product cannot be used exceeding the upper limit of the supplied air pressure.




The parts for VIDA CLAMP may be damaged during machining, causing the workpiece and those parts to be scattered around.

Do not open/close the door of the machine until machining is completely finished.

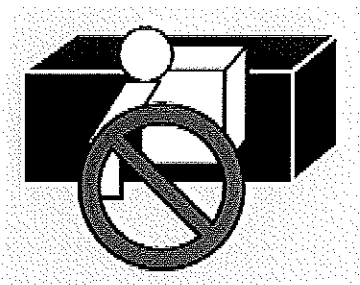

VIDA CLAMP, the workpiece, machining chip, or the like might cause an accident resulting in injury or death.

Considering possible power interruption due to power failure or any other reason, use a check valve to maintain the air pressure.

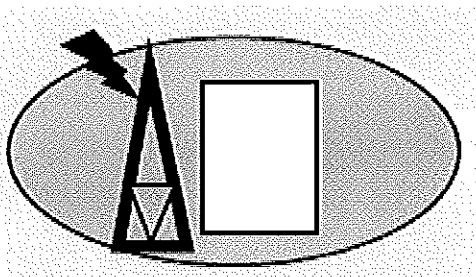

The workpiece might be ejected, causing an accident resulting in injury or death or damage to the machine or other equipment.