


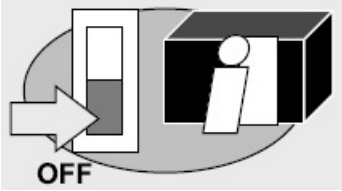

Precautions for Use

To attach, replace, or lubricate **MANO CLAMP**, previously turn **OFF** the power.




If the spindle, tool rest, grinding wheel, or the like moves, the operator is exposed to very hazardous risks.

During spindle rotation, do not use the opening/closing valve.



This is very dangerous as the workpiece would be ejected.

The **MANO CLAMP** cannot be used beyond the maximum number of revolutions.

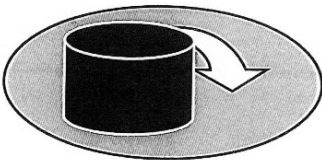

A centrifugal force generated from the number of revolutions may cause a clamping force to become insufficient. This is very dangerous as a workpiece would be ejected.