




Precautions for Use

To attach, replace, or lubricate MANO CLAMP, previously turn OFF the power.

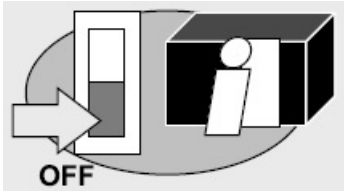


If the spindle, tool rest, grinding wheel, or the like moves, the operator is exposed to very hazardous risks.

During spindle rotation, do not use the opening/closing valve.



This is very dangerous as the workpiece would be ejected.

The MANO CLAMP cannot be used beyond the maximum number of revolutions.

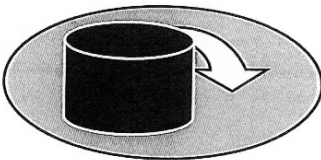

A centrifugal force generated from the number of revolutions may cause a clamping force to become insufficient. This is very dangerous as a workpiece would be ejected.