


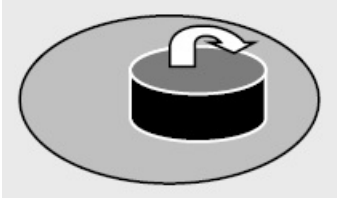


To tighten attaching screws and other parts, use the specified torque.



If MANO CLAMP or its parts come off and are scattered around during rotation, the operator is exposed to very hazardous risks.

When jaws higher than the standard height are used, the clamping torque decreases.

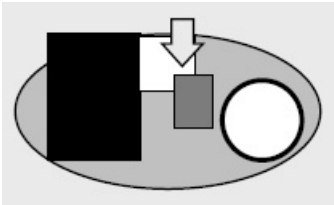

Design and handle the jaws so that the proper state can be maintained within the operating air pressure for the MANO CLAMP.

Avoid any modification to MANO CLAMP as it results in a hazardous situation.



Never give any modification to MANO CLAMP as it causes various hazards including decreased force and air leakage.